Input/Output Controller (IOC) Overview

Eric Norum

IOC Overview

- EPICS Input/Output Controller classifications?
- How to create a new IOC application?
- How to build an IOC application?
- How to run an IOC application on various platforms?
- Console interaction with an IOC application (iocsh)

Reference

EPICS: Input/Output Controller
Application Developers Guide

Go to EPICS home page:
http://www.aps.anl.gov/epics/
then follow links:
BASE->R3.14->R3.14.12
Then click the “EPICS Application Developer's Guide”

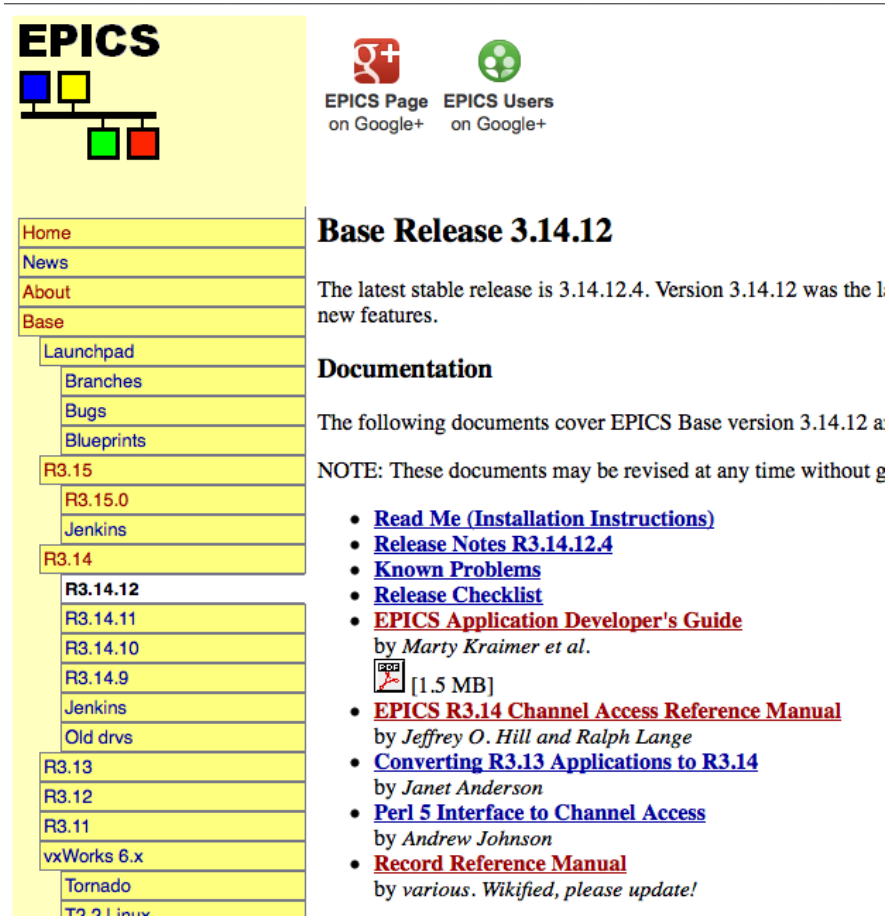

What does an Input/Output Controller do?

- As its name implies, an IOC often performs input/output operations to attached hardware devices.
- An IOC associates the values of EPICS process variables with the results of these input/output operations.
- An IOC can perform sequencing operations, closed-loop control and other computations.

‘Host-based’ and ‘Target’ IOCs

- ‘Host-based’ IOC
  - Runs in the same environment as which it was compiled
  - ‘Native’ software development tools (compilers, linkers)
  - Sometimes called a ‘Soft’ IOC
  - IOC is an program like any other on the machine
  - Possible to have many IOCs on a single machine
- ‘Target’ IOC
  - Runs in a different environment than where compiled
  - ‘Cross’ software development tools
  - vxWorks, RTEMS, Linux, iOS
  - IOC boots from some medium (network, flash memory)
  - IOC is the only program running on the machine

IOC Software Development Area

- IOC software is usually divided into different <top> areas
  - Each <top> provides a place to collect files and configuration data associated with one or more similar IOCs
  - Each <top> is managed separately
  - A <top> may use products from other <top> areas (EPICS base, for example can be thought of as just another <top>)

IOC Software Development Tools

- EPICS uses the GNU version of make
  - Almost every directory from the <top> on down contains a 'Makefile'
  - Make recursively descends through the directory tree
    - Determines what needs to be [re]built
    - Invokes compilers and other tools as instructed in Makefile
  - GNU C/C++ compilers or vendor compilers can be used

IOC Application Development Examples

The following slides provide step-by-step examples of how to:

- Create, build, run the example IOC application on a 'host' machine (Linux, Solaris, Darwin, etc.)
- Create, build, run the example IOC application on a vxWorks 'target' machine

Each example begins with the use of 'makeBaseApp.pl'

The ‘makeBaseApp.pl’ program

- Part of EPICS base distribution
- Populates a new, or adds files to an existing, <top> area
- Requires that your environment contain a valid EPICS_HOST_ARCH (EPICS base contains scripts which can set this as part of your login sequence)
  - linux-x86_64, darwin-x86, win32-x86
- Creates different directory structures based on a selection of different templates
- Commonly-used templates include
  - ioc - Generic IOC application skeleton
  - example - Example IOC application

Creating and initializing a new <top>

- Create a new directory and run makeBaseApp.pl from within that directory
  - mkdir lectureExample
  - cd lectureExample
  - /opt/epics/iocapps/R3.14.12/base/bin/linux-x86_64/makeBaseApp.pl -t example first

---

- Provide full path to makeBaseApp.pl script to ensure particular version of base:

  `<base>/bin/<arch>/makeBaseApp.pl`
- The template is specified with the '`-t`' argument
- The application name (firstApp) is specified with the '`first`' argument

<top> directory structure

- The makeBaseApp.pl creates the following directory structure in <top>:
  configure/ - Configuration files
  firstApp/ - Files associated with the 'firstApp' application
  Db/ - Databases, templates, substitutions
  src/ - Source code

- Every directory contains a 'Makefile'

<top>/configure files

- Some may be modified as needed
  - CONFIG_SITE

    Specify make variables (e.g. to build for a particular target):

    `CROSS_COMPILER_TARGET_ARCHS = vxWorks-68040`
  - RELEASE

    Specify location of other <top> areas used by applications in this <top>area.
- Others are part of the (complex!) build system and should be left alone.

Create a host-based IOC boot directory

- Run makeBaseApp.pl from the <top> directory
- '`-t example`' to specify template
- '`-i`' to show that IOC boot directory is to be created
- '`-a` <*arch*>' to specify hardware on which IOC is to run
- name of IOC

➢ **`makeBaseApp.pl-t example -i -a linux-x86_64 first`**

- If you omit the '-a <*arch*>' you may be presented with a menu of options from which to pick

<top> directory structure

- The command from the previous page creates another directory in <top>:

iocBoot/ **- Directory containing per-IOC boot directories**

iocfirst/ - Boot directory for ‘iocfirst’ IOC

Build the application

- Run the GNU make program
  - ‘make’ on Darwin, Linux, Windows
  - ‘gnumake’ on Solaris

➢ **`make`**

- Runs lots of commands

<top> directory structure after running `make`

- These additional directories are now present in <top>

bin/ **- Directory containing per-architecture directories**

linux-x86_64/ **- Object files and executables for this architecture**

lib/ **- Directory containing per-architecture directories**

linux-x86_64/ **- Object libraries for this architecture**

dbd/ **- Database definition files**

db/ **- Database files (record instances, templates)**

- There may be other directories under bin/ and lib/, too.

<top> directory structure after running `make`

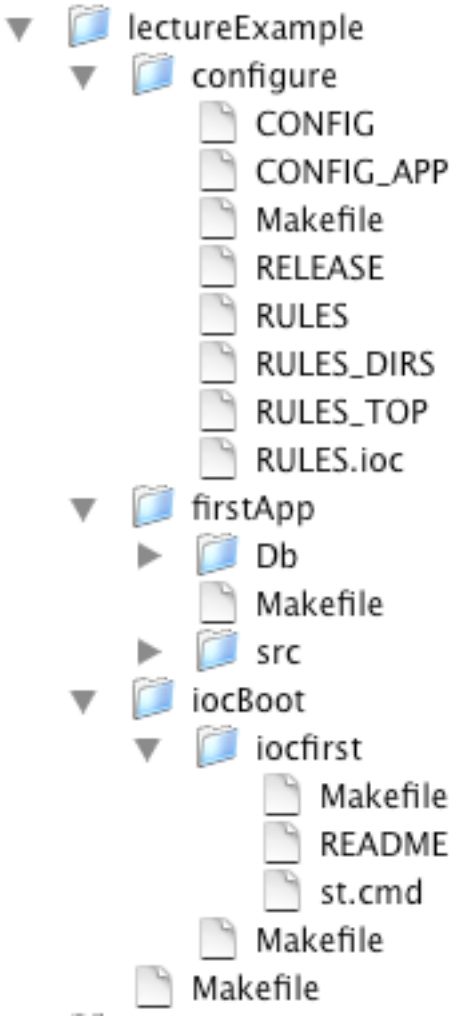

IOC startup

- IOCs read commands from a startup script
  - Typically ‘st.cmd’ in the <top>/iocBoot/<iocname>/ directory
- vxWorks IOCs read these scripts with the vxWorks shell
- Other IOCs read these scripts with the iocsh shell
- Command syntax can be similar but iocsh allows more familiar form too
  - ‘Familiar’ to those used to the Unix/Linux command line
- Script was created by ‘makeBaseApp.pl -i’ command
- For a real IOC you’d likely add commands to configure hardware modules, start sequence programs, update log files, etc.

Example application startup script

```
1  #!../../bin/linux-x86_64/first
2
3  ## You may have to change first to something else
4  ## everywhere it appears in this file
5
6  < envPaths
7
8  cd ${TOP}
9
10  ## Register all support components
11  dbLoadDatabase("dbd/first.dbd")
12  first_registerRecordDeviceDriver(pdbbase)
13
14  ## Load record instances
15  dbLoadRecords("db/dbExample1.db","user=studentHost")
16  dbLoadRecords("db/dbExample2.db","user=studentHost,no=1,scan=1 second")
17  dbLoadRecords("db/dbExample2.db","user=studentHost,no=2,scan=2 second")
18  dbLoadRecords("db/dbExample2.db","user=studentHost,no=3,scan=5 second")
19  dbLoadRecords("db/dbSubExample.db","user=studentHost")
20
21  ## Set this to see messages from mySub
22  #var mySubDebug 1
23
24  cd ${TOP}/iocBoot/${IOC}
25  iocInit()
26
27  ## Start any sequence programs
28  #seq sncExample,"user=studentHost”
```

Example application startup script

1 #!../../bin/linux-x86_64/first

- This allows a host-based IOC application to be started by simply executing the st.cmd script
- If you're running this on a different architecture the 'linux-x86_64' will be different
- If you gave a different IOC name to the 'makeBaseApp.pl -i' command the 'first' will be different
- Remaining lines beginning with a '#' character are comments

Example application startup script

6 < envPaths

- The application reads commands from the ‘envPaths’ file created by ‘makeBaseApp -i’ and ‘make’
- The envPaths file contains commands to set up environment variables for the application:
  - Architecture
  - IOC name
  - <top> directory
  - <top> directory of each component named in configure/RELEASE
- These values can then be used by subsequent commands

```
epicsEnvSet(ARCH,"linux-x86_64")
epicsEnvSet(IOC,"iocfirst")
epicsEnvSet(TOP,"/home/student/lectureExample")
“epicsEnvSet(EPICS_BASE,"/opt/epics/iocapps/R3.14.12/base")
```

Example application startup script

8 cd ${TOP}

- The working directory is set to the value of the ${TOP} environment variable (as set by the commands in ‘envPaths’)
- Allows use of relative path names in subsequent commands
- Should really be in quotes in case the ‘TOP’ value contains spaces

Example application startup script

```
11  dbLoadDatabase("dbd/first.dbd")
```

- Loads the database definition file for this application
- Describes record layout, menus, drivers

Example application startup script

12 first_registerRecordDeviceDriver(pdbbase)

- Registers the information read from the database definition files

Example application startup script

```
15  dbLoadRecords("db/dbExample1.db","user=studentHost")
16  dbLoadRecords("db/dbExample2.db","user=studentHost,no=1,scan=1 second")
17  dbLoadRecords("db/dbExample2.db","user=studentHost,no=2,scan=2 second")
18  dbLoadRecords("db/dbExample2.db","user=studentHost,no=3,scan=5 second")
19  dbLoadRecords("db/dbSubExample.db","user=studentHost")
```

- Read the application database files
  - These define the records which this IOC will maintain
  - A given file can be read more than once (with different macro definitions)

Example application startup script

```
24  cd ${TOP}/iocBoot/${IOC}
```

- The working directory is set to the per-IOC startup directory
- Again, should be in quotes

Example application startup script

25 iocInit()

- Activates everything
- After reading the last line of the ‘st.cmd’ script the IOC continues reading commands from the console
  - Diagnostic commands
  - Configuration changes

Running a host-based IOC

- Change to IOC startup directory (the one containing the st.cmd script)
  - `cd iocBoot/iocfirst`
- Run the IOC executable with the startup script as the only argument
  - `../../bin/linux-x86_64/first st.cmd`
- The startup script commands will be displayed as they are read and executed
- When all the startup script commands are finished the iocsh will display an '`epics>`' prompt and wait for commands to be typed.

```
iocInit()
############################################################################
###  EPICS IOC CORE built on Jun 23 2004
###  EPICS R3.14.6 $R3-14-6$ $2004/05/28 19:27:47$
############################################################################
Starting iocInit
## Start any sequence programs
#seq sncExample,"user=studentHost"
iocInit: All initialization complete
epics>
```

Some useful iocsh commands

- **Display list of records maintained by this IOC**

```
epics> dbl
studentHost:aiExample
studentHost:aiExample1
studentHost:aiExample2
studentHost:aiExample3
studentHost:calcExample
studentHost:calcExample1
studentHost:calcExample2
studentHost:calcExample3
studentHost:compressExample
studentHost:subExample
studentHost:xxxExample
```

- Caution – some IOCs have a lot of records

Some useful iocsh commands

- **Display a record**

```
epics> dbpr studentHost:aiExample
ASG:                DESC: Analog input  DISA: 0             DISP: 0
DISV: 1             NAME: studentHost:aiExample             RVAL: 0
SEVR: MAJOR         STAT: HIHI          SVAL: 0             TPRO: 0
VAL: 9
epics> dbpr studentHost:aiExample
ASG:                DESC: Analog input  DISA: 0             DISP: 0
DISV: 1             NAME: studentHost:aiExample             RVAL: 0
SEVR: MINOR         STAT: LOW           SVAL: 0             TPRO: 0
VAL: 4
```

- `dbpr <recordname> 1` prints more fields
- `dbpr <recordname> 2` prints even more fields, and so on

Some useful iocsh commands

- **Show list of attached clients**

```
epics> casr
Channel Access Server V4.11
No clients connected.
```

- `casr 1` prints more information
- `casr 2` prints even more information

Some useful iocsh commands

- **Do a ‘put’ to a field**

```
epics> dbpf studentHost:calcExample.SCAN "2 second"
DBR_STRING:           2 second
```

- Arguments with spaces must be enclosed in quotes

Some useful iocsh commands

- **The ‘help’ command, with no arguments, displays a list of all iocsh commands**
  - 100 or so, plus commands for additional drivers
- **With arguments it displays usage information for each command listed**
- **Wildcard characters (‘?’, ‘*’) can be used**

```
epics> help dbl dbpr dbpf
dbl 'record type' fields
dbpr 'record name' 'interest level'
dbpf 'record name' value
```

Terminating a host-based IOC

- **Type ‘`exit`’ to the iocsh prompt**
- **Type your ‘interrupt’ character (usually control-C)**
- **Kill the process from another terminal/window**

Create a vxWorks IOC boot directory

- Almost the same as for a host-based IOC
  - just the **<*arch*>** changes
- Run makeBaseApp.pl from the <top> directory
- '`-t example`' to specify template
- '`-i`' to show that IOC boot directory is to be created
- '`-a` <*arch*>' to specify hardware on which IOC is to run
- name of IOC

➢ **`makeBaseApp.pl -t example -i -a vxWorks-68040 first`**

vxWorks IOC startup script changes

- The startup script created by '`makeBaseApp.pl -i`' for a vxWorks IOC is slightly different than one created for a host-based IOC
- A vxWorks IOC uses the vxWorks shell to read the script
  - a host-based IOC uses the iocsh shell
- A vxWorks IOC incrementally loads the application binary into the vxWorks system
  - A host-based IOC runs as a single executable image

vxWorks IOC startup script changes

- The first few lines of the example st.cmd script for a vxWorks target are:

```
## Example vxWorks startup file

## The following is needed if your board support package doesn't at boot time
## automatically cd to the directory containing its startup script
#cd "/home/phoebus/student/lectureExample/iocBoot/iocfirst”

< cdCommands
#< ../nfsCommands

cd topbin
## You may have to change first to something else
## everywhere it appears in this file

ld < first.munch
```

vxWorks IOC startup script changes

- There is no ‘#!’ line at the beginning of the script
- vxWorks IOCs can’t be started by simply executing the startup script

vxWorks IOC startup script changes

- The startup script reads more commands from cdCommands rather than from envPaths
  - Assigns values to vxWorks shell variables rather than to iocsh environment variables
- Subsequent ‘cd’ commands look like

```
cd top
```

rather than

```
cd ${TOP}
```

vxWorks IOC startup script changes

- The startup script contains command to load the binary files making up the IOC application

```
ld < first.munch
```

  - Binary fragments have names ending in '.munch'

Running a vxWorks IOC

- **Set up the vxWorks boot parameters**

```
Press any key to stop auto-boot...
 6
[VxWorks Boot]: c
'.' = clear field;  '-' = go to previous field;  ^D = quit
boot device          : ei
processor number     : 0
host name            : phoebus
file name            : /usr/local/vxWorks/T202/mv167-asd7_nodns
inet on ethernet (e) : 192.168.8.91:fffffc00
inet on backplane (b):
host inet (h)        : 192.168.8.167
gateway inet (g)     :
user (u)             : someuser
ftp password (pw) (blank = use rsh): somepassword
flags (f)            : 0x0
target name (tn)     : iocnorum
startup script (s)   : /usr/local/epics/iocBoot/iocfirst/st.cmd
other (o)            :
```

Running a vxWorks IOC

```
host name               : Name of your FTP server
file name               : Path to the vxWorks image on the FTP server
inet on ethernet (e)    : IOC IP address/netmask
inet on backplane (b):
host inet (h)           : FTP server IP address
gateway inet (g)        :
user (u)                : User name to log into FTP server
ftp password (pw) (blank = use rsh): Password to log into FTP server
flags (f)               : Special BSP flags
target name (tn)        : IOC name
startup script (s)      : Path to IOC startup script on FTP server
other (o)               :
```

- **Once these parameters have been set a reboot will start the IOC**

vxWorks shell

- The vxWorks shell requires that commands be entered in a slightly different form
  - String arguments must be enclosed in quotes
  - Arguments must be separated by commas
  - There is no ‘help’ command
  - Many vxWorks-specific commands are available
- For example, the ‘dbpf’ command shown previously could be entered as:

```
dbpf “studentHost:calcExample.SCAN”,”2 second”
```

- or as:

```
dbpf(“studentHost:calcExample.SCAN”,”2 second”)
```

Review

- IOC applications can be host-based or target-based
- The makeBaseApp.pl script is used to create IOC application modules and IOC startup directories
- <top>/configure/RELEASE contents specify location of other <top> areas used by this <top> area
- <top>/iocBoot/<iocname>/st.cmd is the startup script for IOC applications
- The EPICS build system requires the use of GNU make
- vxWorks IOCs use the vxWorks shell, non-vxWorks IOCs use iocsh
- The EPICS Application Developer's Guide contains a wealth of information