

MEDM

Kenneth Evans, Jr. August 23, 2004

Part of the EPICS "Getting Started" Lecture Series

Abridged version for SSG class: Tim Mooney 2013

Argonne National Laboratory



A U.S. Department of Energy Office of Science Laboratory Operated by The University of Chicago






MEDM Overview

- MEDM stands for <u>Motif</u> <u>Editor</u> and <u>Display</u> <u>Manager</u>
- It is a graphical user interface (GUI) for designing and implementing control screens, also called displays
- It is a mature program
- Tens of thousands of screens have been designed for MEDM
- It is used worldwide at many sites
 - Others: EDM, CSS-BOY, caQtDM display translators exist
 - epicsqt similar, but no direct display translation
- It is the primary means by which operators and engineers control the APS and many beamlines



Example MEDM Screens

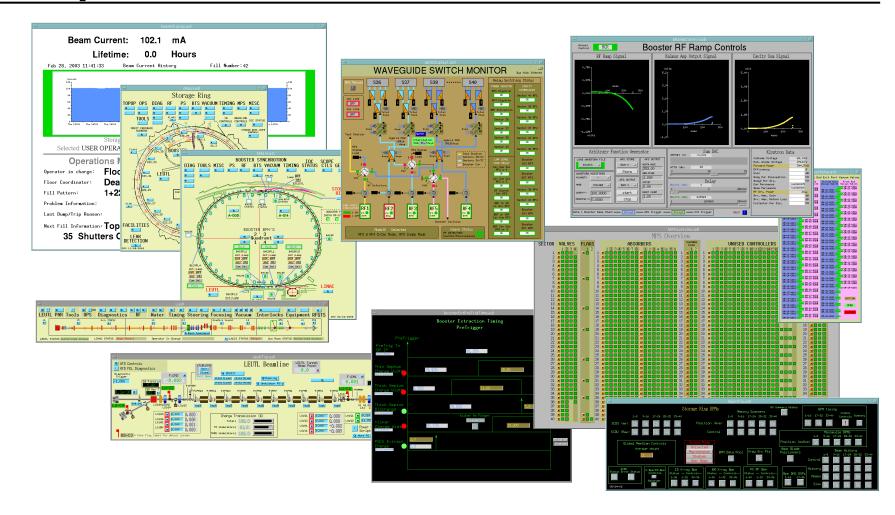

History

- It is an APS product
- Started by Mark Anderson in 1990
 - Responsible for the look and feel, much of the implementation
 - Based on DM and EDD written at Los Alamos
 - Choose Motif for a more impressive interface
- Taken over by Fred Vong from Fall 1994 to Winter 1996
 - Improved the performance under load
 - Rewrote the Strip Chart
 - Many of his improvements were unfinished when he left
- Taken over by Ken Evans in 1996
 - Concentrated on robustness, stability
 - Added most of the Editing features (Undo, Align, etc.)
 - Made Composite object be dynamic
 - Added animated GIFs, many other features





More Information


- There is far more to MEDM than can be covered in this presentation
- The main source of information is the MEDM Reference Manual
 - Can be accessed from the Help Menu
 - Uses your browser to display HTML help
 - Also available as a Word document, Postscript, and PDF
- There is an MEDM web page
 - http://www.aps.anl.gov/epics/extensions/medm
 - Has the Reference Manual and tar files of recent versions
- MEDM for Windows is in the EPICS WIN32 Extensions
 - See the MEDM web page





MEDM Virtual Linac Screen

The Virtual Linac MEDM screen is a good example to explore

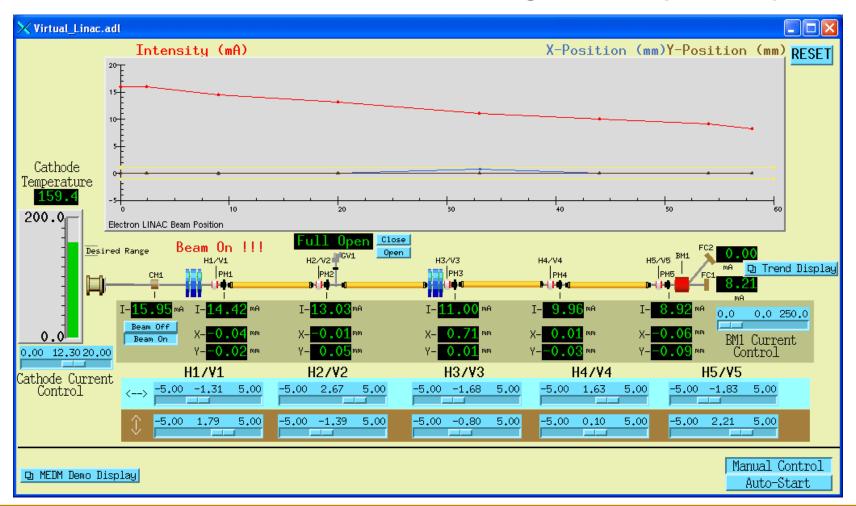



MEDM Objects




Graphics	Monitors	Controllers	Special
Arc	Bar Monitor	Choice Button	Composite
Image	Byte Monitor	Menu	Display
Line	Cartesian Plot	Message Button	
Oval	Meter	Related Display	
Polygon	Scale Monitor	Shell Command	
Polyline	Strip Chart	Slider	
Rectangle	Text Monitor	Text Entry	
Text			




Resource Palette

- Each object has a set of properties
- The properties are chosen via the Resource Palette
- All objects have
 - X and Y Position
 - Height and Width
- Others vary depending on the object
- Properties are specified by
 - Text Boxes
 - Color selectors
 - Pull down menus
 - Dialogs

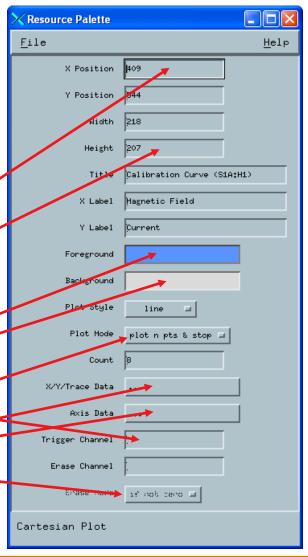


Examples of All MEDM Objects

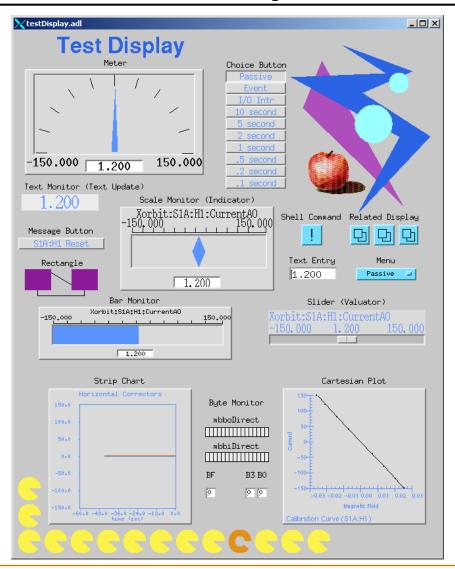

Editing Features

- Menus are all Tear-Off
- Undo (only one operation)
- Align
 - Left, Horizontal Center, Right
 - Top, Vertical Center, Bottom
 - Position to Grid
 - Edges to Grid
- Space Evenly
 - Horizontal and Vertical
 - 2-D
- Grid
 - Toggle Show Grid
 - Toggle Snap to Grid
 - Set Grid Spacing

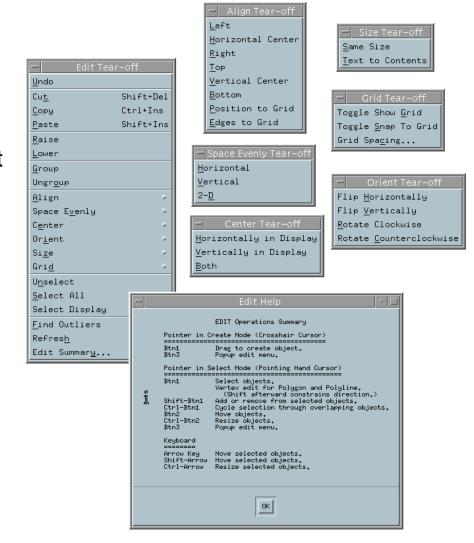

Editing Features

Center

- Horizontally and Vertically in Display
- Both

Orient


- Flip Horizontally and Vertically
- Rotate Clockwise and Counterclockwise (90°)

Size

- Same Size
- Text to Contents

Others

- Find Outliers
- Refresh
- Edit Summary (Keyboard and Button Shortcuts)

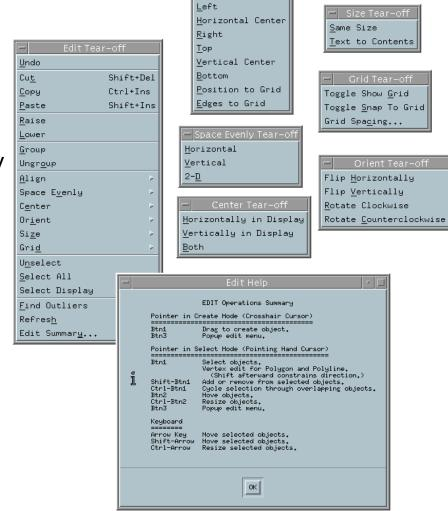

Fonts


- Fonts in MEDM are somewhat brain dead
 - Changing them would trash thousands of existing screens
- MEDM can use either Fixed or Scalable fonts
- Fixed fonts use font aliases for flexibility
 - widgetDM_4, widgetDM_6, ..., widgetDM_60
 - These can be assigned to any X Windows Font
 - We are stuck with the original APS assignments
- Scalar fonts use one font (your choice) and vary the size
 - Was not available when the APS was started
- For new sites, the defaults can be changed in siteSpecific.h
 - When MEDM is built
- The font size is determined by the height of the text box
 - The text can extend beyond the box horizontally
 - In practice you vary it until it looks right






Default Fixed and Scalable Fonts

fontTable.adl opened without and with –displayFont scalable

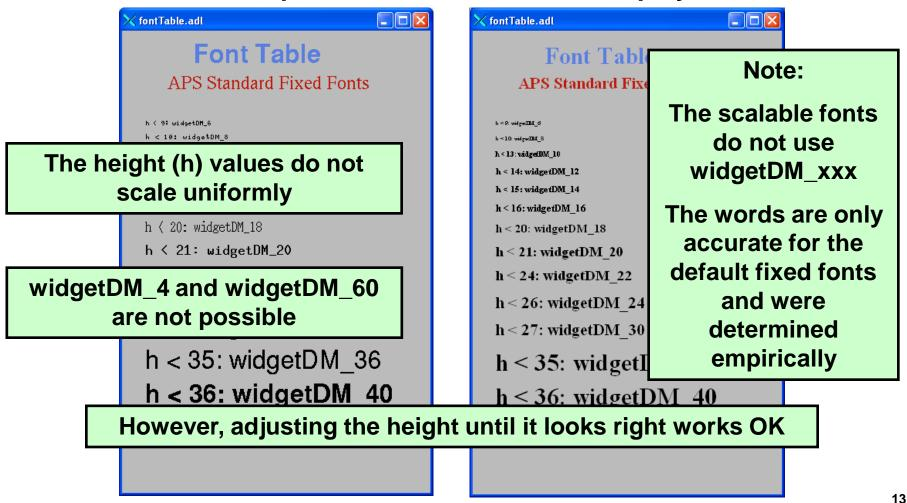

Graphic Objects

Many effects are created with Graphics objects

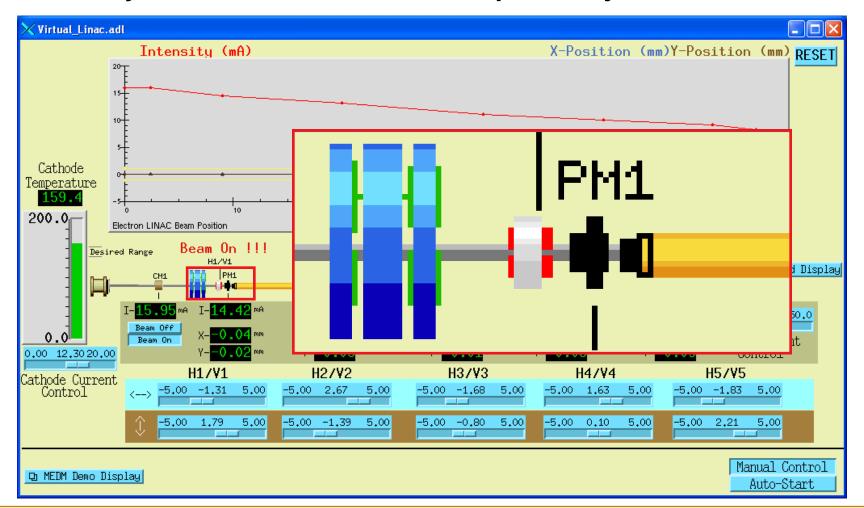

Dynamic Attribute

- Applies primarily to Graphics objects
- Objects with a Dynamic Attribute can have their color or visibility change based on process variables or conditions
- Color Mode
 - Object has alarm colors (Green, Yellow, Red, White)
- Visibility Mode
 - Visible only if the process variable is zero or only if not zero
- Visibility Calc Mode
 - Visibility is based on a CALC expression involving up to 4 process variables plus HOPR, LOPR, STAT, SEVR, etc.
- Also applies to the Composite (also called a "group")
 - Allows whole sections of the display to appear or disappear
 - Means any object can have a Dynamic Attribute
 - Make it be a Composite with just one member





CALC in MEDM

- Used in two places
- Visibility
 - Used when Visibility mode is set to "calc" and Visibility Calc is defined
 - CALC expression returns True or False
 - The APS Status Display uses this feature
 - With Composites (like the Demo)
- Image Frame Number (Animated GIFs)
 - Used when Image Calc is defined
 - Will just animate otherwise
 - CALC expression returns a frame number
 - Frame numbers start with 0
 - Uses 0 or last frame if out of range










MEDM CALC Expression

Expression involving 16 variables

- A The value of Channel A
- B The value of Channel B
- C The value of Channel C
- D The value of Channel D
- E Reserved
- F Reserved
- G The COUNT of Channel A
- H The HOPR of Channel A
- I The STATUS of Channel A
- J The SEVERITY of Channel A
- K The PRECISION of Channel A
- L The LOPR of Channel A

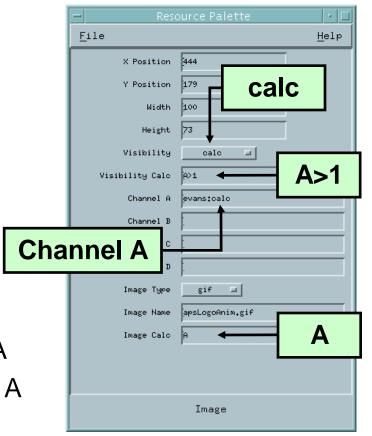

Examples of MEDM CALC Expressions

- Syntax is the same as for the EPICS CALC record
 - See the Record Reference Manual
- Some True/False Examples (for Visibility)

- !A Value is zero (Same as "if zero")

- A Value not zero (Same as 'if not zero")

- A=12 (or A==12) Value is 12

- A#12 (or A!=12) Value is not 12

- A<0&&B<0&&C<0 All are negative

- A>.9*H Beyond 90% of upper limit

- !J SEVERITY is not zero Alarm

Some Number Examples (for Image Calc)

- A Frame is value of A

- A=12 Frame 0 or 1

- (A+B)*SIN(C) Frame determined by expression





Color Rules Using Animated GIFs


- Make a multi-frame GIF
 - One frame per desired color, One pixel per frame
- Put this GIF under the object you want to have color rules
- Use a CALC expression that rounds off to the frame number
- Example: 3 colors: Green, Yellow, Red
 - **CALC**: (ABS(A)<.8*H)+(ABS(A)<.9*H)
 - **Gives:** Green for |A| up to 0.8*HOPR

Yellow for |A| from 0.8*HOPR to 0.9*HOPR

Red for |A| greater than 0.9*HOPR

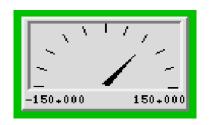











Use SGA to Make and Edit Animated GIFs

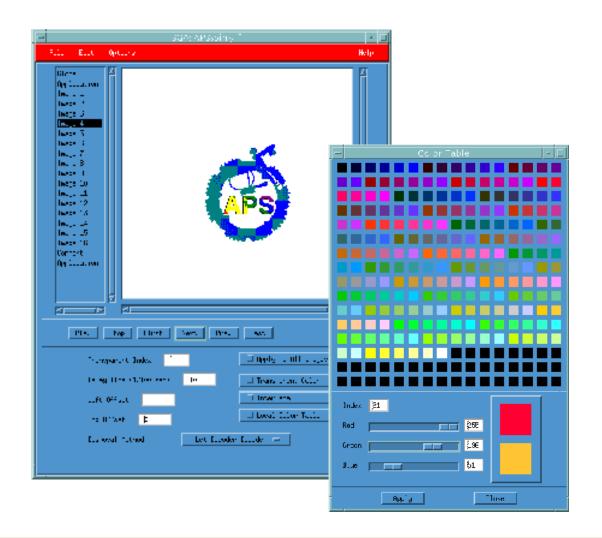



Execute Mode

What's wrong with this screen?

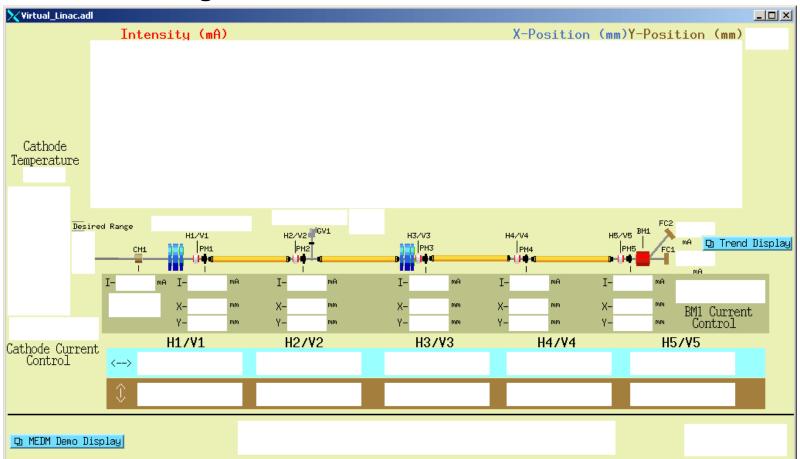

MEDM objects turn white when the connection is lost





Drag and Drop

- You can drag the process variable names from an object
 - Use Mouse Button 2 (the middle button)
- The Process variable name appears in its alarm color on black
- Can be dragged to any Motif Drop Site
 - This includes Probe, StripTool, HistTool, and others
- Names now go into the X Clipboard as well
 - Can paste them in the usual places without even dragging
- In practice Button 2 is used as a fast way to see the process variable name
- Doesn't work on a Mac







PV Info

PV Info

- Gives extensive information about the process variable

Accessed through the Execute-Mode Menu

- Right click the display
- Use the cursor to pick which object





PV Limits

PV Limits


 Allows you to set the limits for Meters, Sliders, etc

The user can:

- Use the values from Channel Access (HOPR, LOPR, PREC)
- Use the defaults set by the screen designer
- Set her own values

The screen designer can:


- Set it to use Channel Access values for the defaults
- Set the defaults
- Accessed through the Execute-Mode Menu

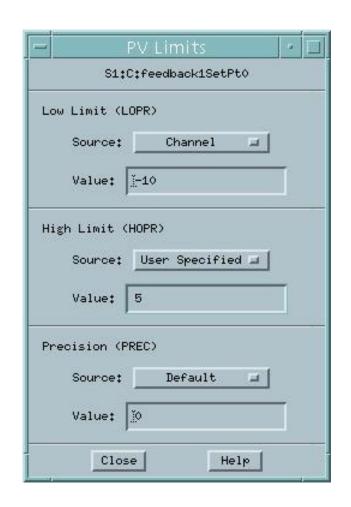



Execute Menu

- The Execute Menu is a user-configurable menu that can be added to the right-click menu on displays in Execute Mode
- Specified by the MEDM_EXEC_LIST environment variable
 - If not specifed, it doesn't appear at all
- Example
 - setenv MEDM_EXEC_LIST 'Probe; probe &P & ADL File; echo &A:PV Name(s); echo &P'
 - Gives the menu shown
 - Selecting the Probe item, for example, will allow you to select an object, then run Probe on its process variable
- See the manual for details

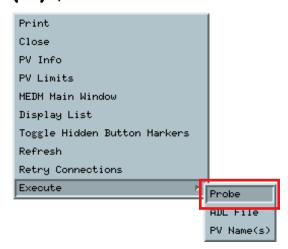





Macros

- Strings of the form \$(name) in an ADL file can be replaced by some other string
 - For example, enter \$(sector):\$(corrector) as part of a PV name
- Replacement is specified:
 - 1. On command line:

```
medm -x -macro "sector=S1A, corrector=H2"
```

- 2. In Related Display configuration:

Resource Palette dialog


- Allows you to design one screen and use it for many similar items
- The Virtual Linac uses \$(user) in front of PV names
 - So different users have their own PV names
 - Look at the startup scripts for MEDM for the Virtual Linac





Related Display

- Brings up a menu of other displays
- As with most MEDM objects there are many options

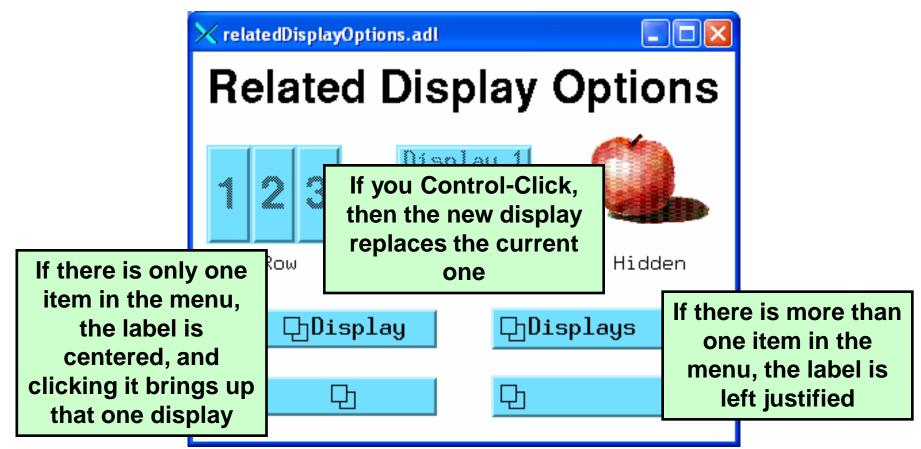







Hidden Button Markers

- Related Displays can be hidden under other objects
- Toggle Hidden Button Markers shows where they are

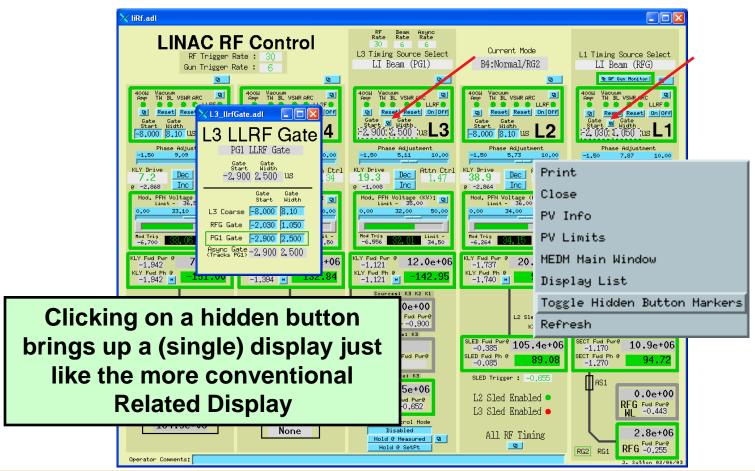


Bar Monitor

Here are some options for the Bar Monitor

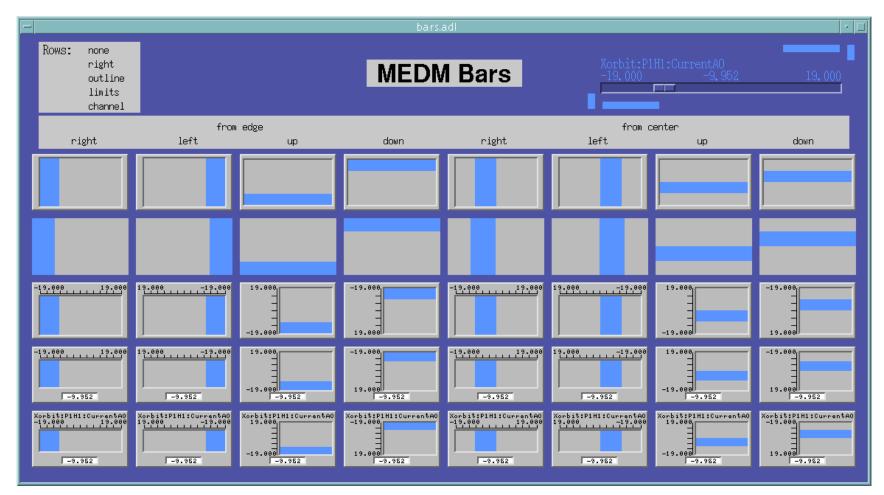


Bar Monitor

The no decorations mode, useful for bar graphs and effects

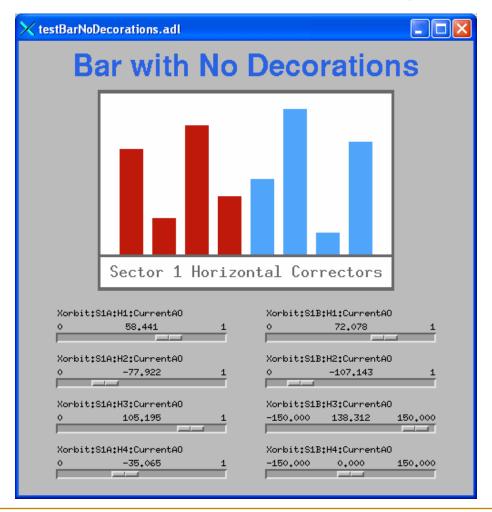

Strip Chart

 While not as powerful as StripTool, the MEDM Strip Chart has many features, which can be changed on the fly

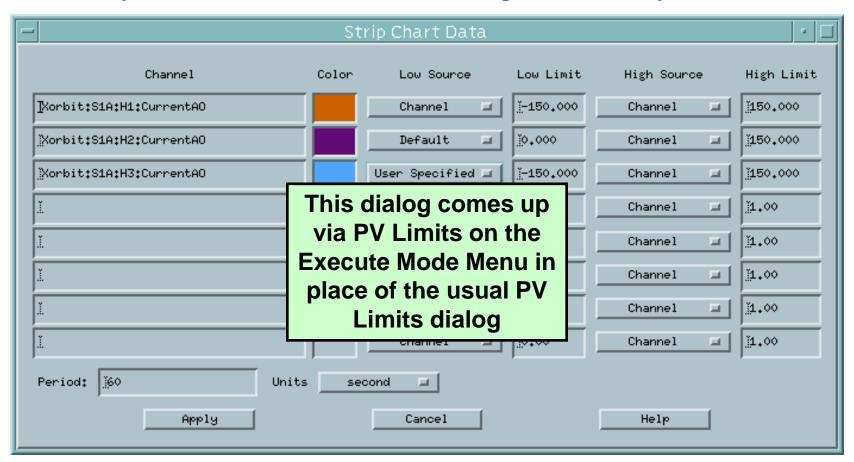



Cartesian Plot

- The Cartesian Plot is the most complicated MEDM object
- MEDM provides generic support for different plot packages
- XRT/Graph
 - Most complete implementation is XRT/Graph
 - Commercial product, not available for Windows
 - Requires a license on each machine on which it is built
 - Many features and works well

SciPlot

- Public Domain, modified extensively for MEDM
- Included with MEDM, should work on any platform
- Currently missing Second Y axis and Fill Under

JPT

- Developed at TJNAF
- Does not support all MEDM Cartesian Plot features





Environment variables

- EPICS_DISPLAY_PATH
 - Normally set by a script that reads the application's configure/RELEASE file.
- EPICS_CA_ADDR_LIST
 - For beamlines, normally includes the IP address of a PV gateway.
- EPICS_CA_MAX_ARRAY_BYTES
 - The maximum number of bytes transferred for an array.
 - This should be >= the definition in the IOC.
- MEDM_EXEC_LIST
 - Described earlier, on "Execute Menu" slide.





Hands on (see handout)

Virtual Linac

- Download and install
- Run "MEDM Virtual Linac", "Start Virtual Linac"

Group exercises

- Start MEDM in edit mode
- Make related display button

Independent exploration of MEDM features

- Tear-off menus
- Right-mouse-button menu

Independent exercises

- Visibility calc
- Composite display



